

USER MANUAL

- **Alpha-Numeric Display Pager** •


MODEL: AL-924e

CONTENTS

Control Buttons	1
Features and Functions	2-3
LCD Display	4
Function Operation.....	5-20
Reading a Message	5
Locking Message	6
Unlocking Message	7
Deleting	8
Deleting All	9
Add to Personal Memo	10
Setting Alert	11
Pager On / Off	13
Setting Auto Sleep	14
Setting Alarm	15
Setting Time And Date	16
Setting Scroll	17
Setting Zoom In Or Zoom Out	19
Reading The Mail Drop	20
Moving The Cursor	21
Reading The Personal Message	22
Reading The Full Message	23
Backlighting / Duplicate	24
Error Message / Battery Gauge	25
Set Mail Drop Alert	26

Control Buttons

MODEL:AL924e

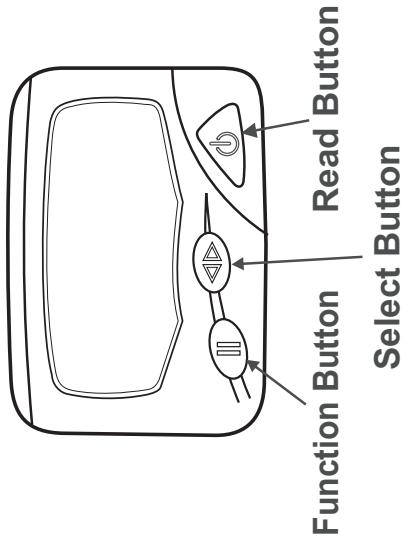

I Read Button

- to read message
- to turn on back-light
- to turn on power
- to activate the function

II Select Button

- to move the cursor
 - to read message by cycles
- III Function Button
- to display the function menu
 - to adjust the time and date change
 - to enable the function mode

Features and Functions

- ◊ 4-Line , 84 English Alpha Character Memory
- ◊ Easy-To-Read Back-Lit Display
- ◊ Up To Memory Capacity 32,000 Characters.
- ◊ 16 Memory Slots + Message Full 10 sets
- ◊ Personal Message Memory : 20 sets , Mail Drop Available
- ◊ Show Time Of Day And Date
- ◊ User Selectable 12 / 24 Hour Clock
- ◊ Message Date And Time Stamping
- ◊ Incomplete Message-In Indication
- ◊ Duplicate Message Indicator
- ◊ Locks Important Message (Up To 10 Sets)
- ◊ All Or Individual Message Delete
- ◊ Unread Message Indicator , Reminder Alert

Features and Function


2

- ◊ Low Battery Alert , Low Battery Indicator
- ◊ Zoom The Display - To Enlarge Message For Easy Read ability
- ◊ Message Full Indication , Message Full Auto Storage
- ◊ Message Preview For A Quick Look At Each Message
- ◊ Message Move to Memo (User selectable)
- ◊ Service Area Indication
- ◊ 5 Built-In Alarm Clock
- ◊ 4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode
- ◊ Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times
- ◊ Mail Drop Alerts
- ◊ Save Message When Off And When Changing Battery

Features and Function

3

LCD Display

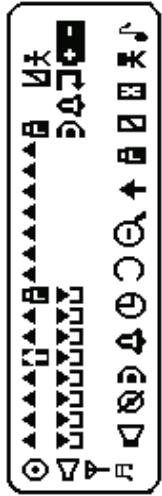

Pager Status Symbols

- | | |
|--------------------------|------------------------------|
| ○ POWER ON INDICATOR | ◀ MESSAGE IN MEMORY |
| ♫ MUSIC ALERT | ▶ MESSAGE SELECTING |
| ■ BEEP ALERT | □ MESSAGE LOCK IN MEMORY |
| ▷ AUTO SLEEP INDICATOR | □ MESSAGE LOCK SELECTING |
| ▲ ALARM INDICATOR | ✖ PERSONAL MESSAGE |
| □ AUTO SCROLL INDICATOR | ✓ FULL MESSAGE |
| + BATTERY CAPACITY | ✖ PERSONAL MESSAGE SELECTING |
| ▼ OUT OF RANGE INDICATOR | FULL MESSAGE SELECTING |
| ✗ ERROR MESSAGE | ✗ MAILDROP IN MEMORY |
| ☒ DUPLICATE MESSAGE | ☒ MAILDROP SELECTING |
| ✉ MAIL DROP MESSAGE | ✖ DELETE ALL |
| ✖ MEMO MESSAGE INDICATOR | ✖ MOVE TO MEMO |
| | ↓ MAIL DROP ALERT |

Message Status Symbols





Function Menu Symbols

- | |
|----------------------|
| ↑ UP OR ESCAPE |
| ◀ SET ALERT |
| ✖ PAGER OFF |
| ▷ SET AUTO SLEEP |
| ▲ SET ALARM |
| ○ SET TIME |
| ○ SET SCROLL |
| ○ ZOOM IN / ZOOM OUT |
| ✖ MESSAGE LOCK |
| ☒ MESSAGE DELETE |
| ✖ DELETE ALL |
| ✖ MOVE TO MEMO |
| ↓ MAIL DROP ALERT |

LDC Display

Receiving And Reading Your Message

- * A flashing **✉** symbol indicates you have a message has not been read.(The symbol **✉** of mail drop shows on screen by flashing).
- * Press **①** once, to preview the message.
- * Press **◀▶**, to display your message.,Press **①** once, to view the next screen.
- ★ If you have set "Auto Scroll ", your pager will scroll through your message screen by screen automatically .

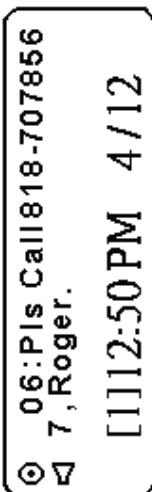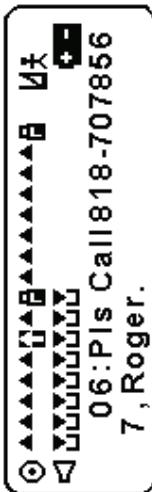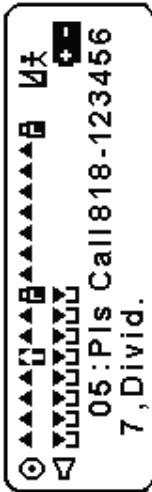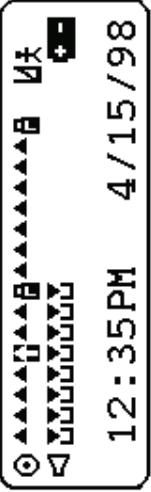




Reading Your Message

Locking Message

6




Locking Messages

- * Press **◀▶**, to move the cursor to the desired flashing symbol. **I**.
- * Press **II**, press **►** once to select the desired message to lock.
- * Press **II**, to lock the message. .
- * The symbol **L** is displayed , indicating the status of the message in memory.

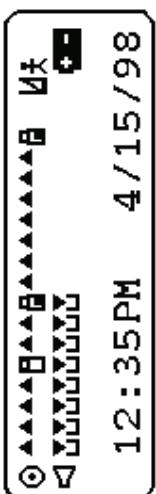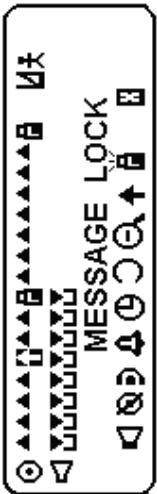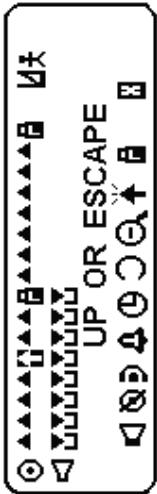

Unlocking Messages

- * Press **◀**, to move the cursor to select the message to unlock.
- * Press **II**, then , press **◀** once, to "MESSAGE UNLOCK" Mode.
- * Press **II** , to unlock the message.

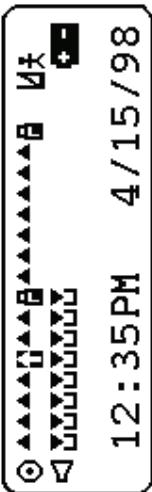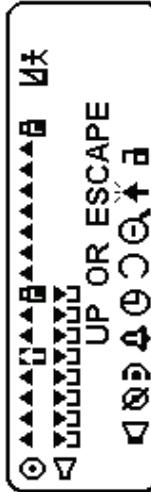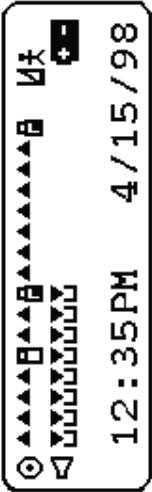



Unlocking Message

Deleting Message

8

Deleting Messages

- * Press **◀▶** , to move the cursor to select the message you desire.
Press **①** to read the message.
- * Press **||** , press **◀▶** once , to display " MESSAGE DELETE " Mode.
- * When " MESSAGE DELETE ?" is displayed on the screen , press **||** to delete the message.

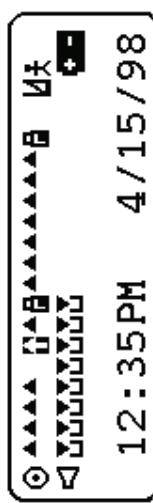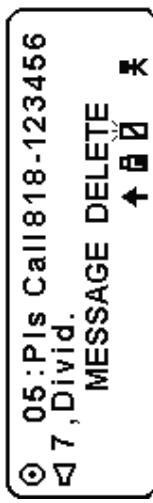


Deleting All Messages

(All unlocked and read messages)

- * Press **II** , press **◀** again , to " DELETE ALL " Mode .

- * When " DELETE ALL ? " is displayed , Press **II** , all unlocked and read messages are now deleted.

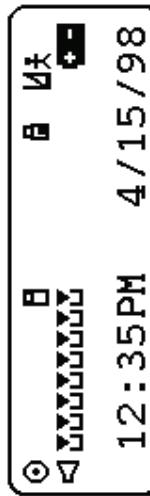

Deleting All Message

Add Message To Memo

10

Move Message To Memo

- * Press **◀▶**, to move the cursor to the desired storing message.
Press **①** to read the message.
- * Press **||**, and press **◀▶** once, to move to "MOVE TO MEMO"
- * Press **||**, to move the flashing icon message automatically into your personal mail .

© 05 :PIs Call 818-123456
✉ 7 ,Divid.
[1]12:30 PM 4 /12



© 05 :PIs Call 818-123456
✉ 7 ,Divid.
MOVE TO MEMO
↑ █ █ ✎

© 05 :PIs Call 818-123456
✉ 7 ,Divid.
MOVE TO MEMO
↑ █ █ ✎

© 05 :PIs Call 818-123456
✉ 7 ,Divid.
MOVE TO MEMO
↑ █ █ ✎

Setting The Alert




- * Press **II** , then , press **◀** once to display " SET ALERT " Mode .
- * Press **II** , to enable "SET ALERT".
- * Press **II** , to move the cursor to the desired alarm mode .(Alert **█** / Musical **♫** / Vibration **■** / Sleep **█** are optional)
- * Press **◀** , to move to the cursor to the desired tone or music .
- * Press **○** setting the alert is completed.

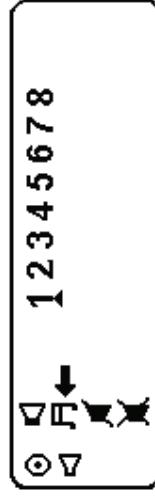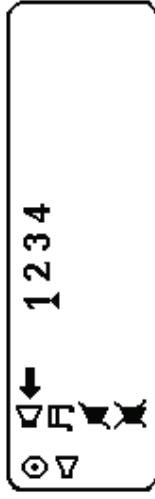

Setting The Alert


Setting The Alert

- * The  symbol is displayed if the message receiver is in the audible mode .
- * The  symbol won't display on screen if the receiver is in the silent mode or sleep mode.

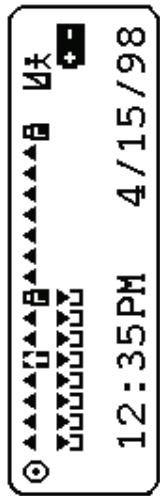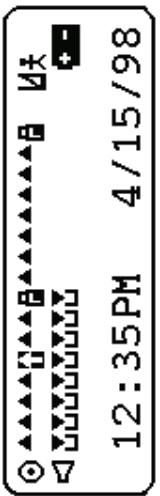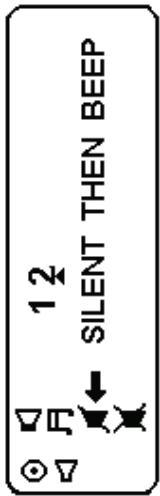

Turning Your Pager Off

- * Press **II** , then , press **◀** again to "PAGER OFF " mode.
- * Press **II** , till " PAGER OFF ? " appears on the screen.
- * Press **◀** , to turn the pager off .
- * After turning your pager off , the screen is empty.
- * Press **①** , to turn the pager power on.

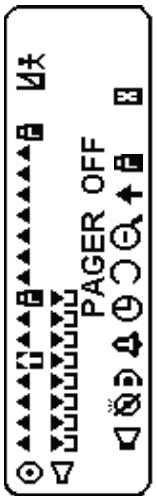



Setting The Pager Off

13

Setting Auto Sleep Mode




Setting Auto Sleep Mode

- * Press **II**, then, press **►** to display "Auto Sleep" mode.
- * Press **II**, to enable "Auto Sleep Set" Mode.
- * Press **II**, to select "open" or "close" (symbol **▷** or **-**) and adjust the digits, press **►** for moving the cursor.
- * Press **①** setting auto sleep mode is completed. The screen returns to stand-by status.
- * **▷** is displayed when the Auto Sleep mode is set.
- * The enable **z Z** symbol indicates your pager is during setting status.

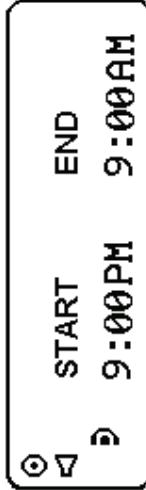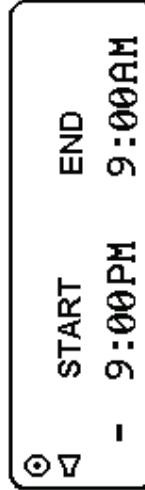

Setting The Alarm (5 alarms)

- * Press **II** , then , press **►►** to "SET ALARM "Mode.
- * Press **II** , to enable or disable the alarm.
- * Press **►►**, to move the cursor to set the alarm status either alarm enabled , alarm disabled or set time.
- * Press **①** setting the alarm is completed.

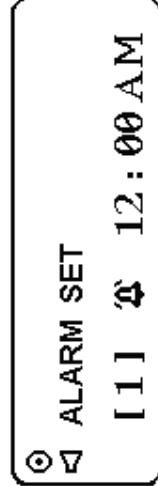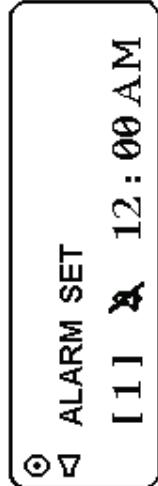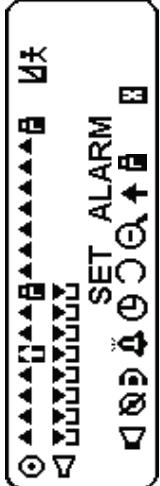

Setting The Alarm

Setting The Time And Date

- * Press **II**, then , press **◀** once until "SET TIME" Mode is displayed.
- * Press **II** , to enable set time . .
- * Press **◀▶**, to move the cursor to the hour / minute digit .Then , press **II** , to adjust each set of digits : AM/ PM/24 hr / month / day.
- * Press **①** to activate the time and date change.

◎ ▲▲▲▲▲▲▲
◀▲▼▼▼▼▼

UP OR ESCAPE
□ Q □ Q □ Q

◎ ▲▲▲▲▲▲▲
◀▲▼▼▼▼▼

SET TIME
□ Q □ Q □ Q □ Q

◎ ▲▲▲▲▲▲▲
◀▲▼▼▼▼▼

12:35PM 4/15/98

◎ ▲▲▲▲▲▲▲
◀▲▼▼▼▼▼


12:35PM 4/15/98

Setting Scroll

- * Press **II**, then, press **◀▶**, to "SET SCROLL "Mode".
- * Press **II**, to enable scroll automatically.
- * Press **II**, to select the speeding of scroll.
 - (1) **█** -- slow.
 - (2) **██** -- normal.
 - (3) **██** -- rapid.
 - (4) **X** -- off

*


Setting Scroll

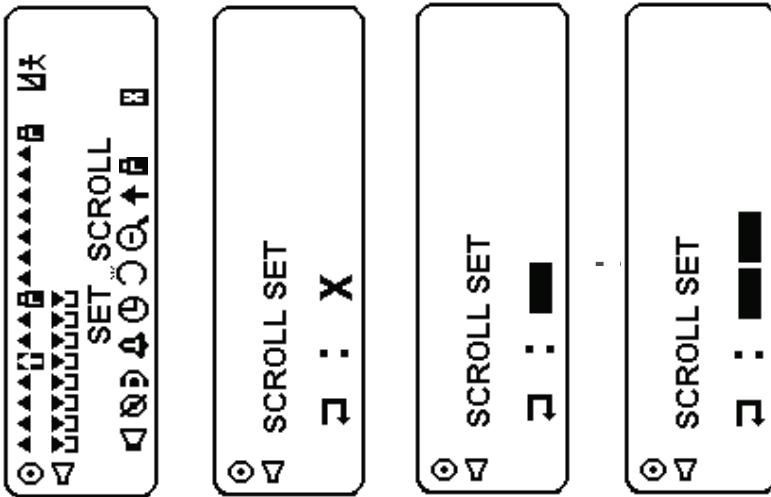

Setting Scroll





Setting Scroll

- * Press **◀▶** to activate the function.
- * When the Auto scroll is set, the **■** symbol is displayed on screen.

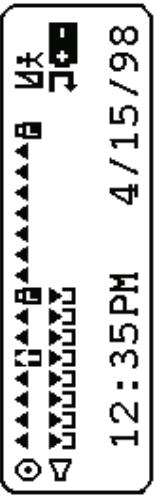

Setting Zoom In / Zoom Out

- * Press **II**, then press **◀▶**, to "ZOOM IN".(symbol **⊕**), Then, press **II** to confirm...
 - * The letters on screen enlarge and become two lines to read.
 - * Or press **◀▶** to move the cursor again to "ZOOM OUT" (symbol **⊖**), and press **II** to complete.
 - * The letters on screen change to four lines to read.

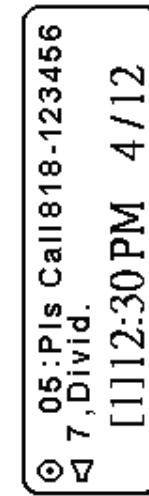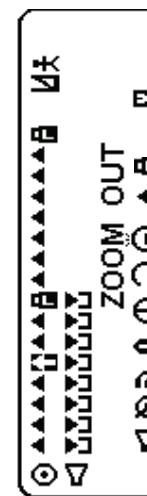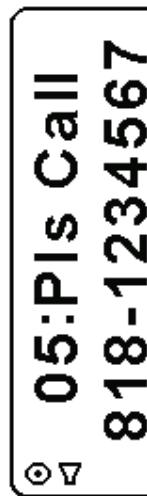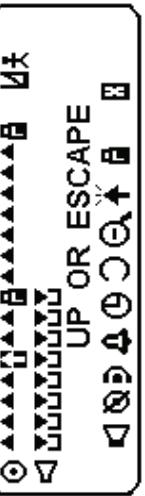


Reading Maildrop

20


Reading Mail Drop

- * Press **II** twice , to move the flashing icon in the second row.
- * Press **O** , to read message or press **◀**, to move the icon to the desired Mail drop.
- * **The features allows 15 sets Mail Drop**

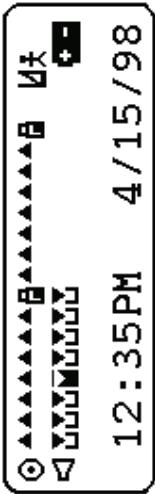

Moving the Cursor




- * Press **◀▶** to move cursor to the **█** icon flashes, indicating the present position of the message you are going to read.
- * Press **II**, the screen shows " UP OR ESCAPE ".
- * Press **II** once, the flashing icon can be move to the top row or the second row, such like "MAIL DROP AREA"or"MESSAGE AREA".
- * Press **II** , the pager returns to standby mode.

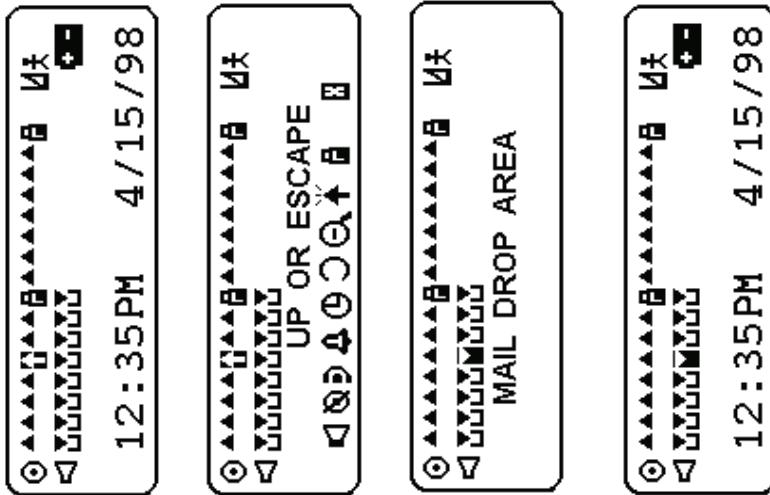

Moving the Cursor



Reading Personal Message

- * Press  , to move the flashing icon to the  symbol.
- * Press  , to read message.
- * When the  symbol is shown in the top left-hand corner of the display , indicates the message status as a personal message.

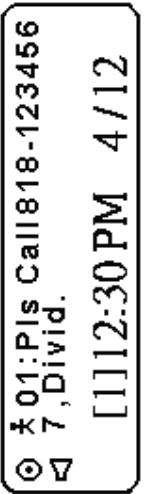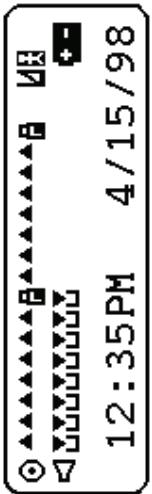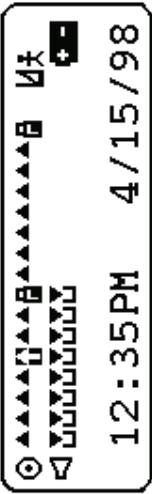

Reading Full Message

- * Press  , to move the flashing icon to the  symbol.
- * Press  , to read message.
- * When the  symbol is shown in the top left-hand corner of the display , indicates the message status as a full message.

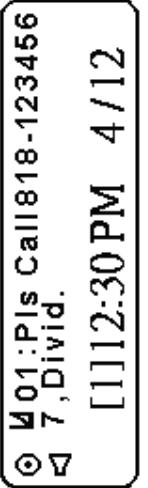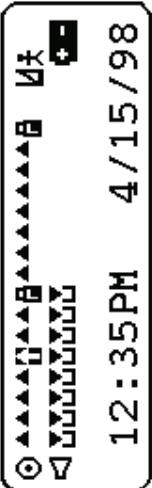

Reading Full Message

23

Backlight/Duplicate

24

Backlighting

You can manually activate the back-lit at any time by pressing and holding for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .


Duplicate Message

The pager automatically covers by the latest messages if it is received the same message. The symbol is shown in the top left-hand corner of the display, indicates the message status as a "Duplicate Message".



Error Message

If it is received the error message. The  symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.

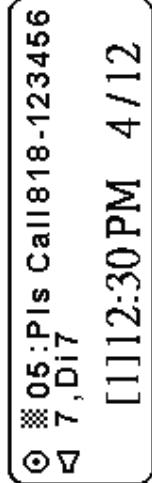

Battery Gauge

The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from  (full),  (1/2),  (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.





Set Mail Drop Alert

26

Set Mail Drop Alert

- * To move the cursor to the Mail Drop.
- * Press **II**, to display the function menu.
- * Press **▲**, to move the cursor to set mail drop alert (**↑**).
- * Press **II**, to activate the function .Or press **①**, to exit

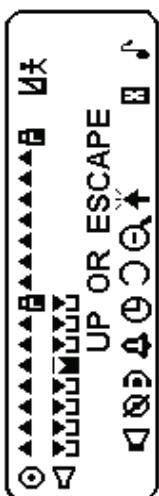

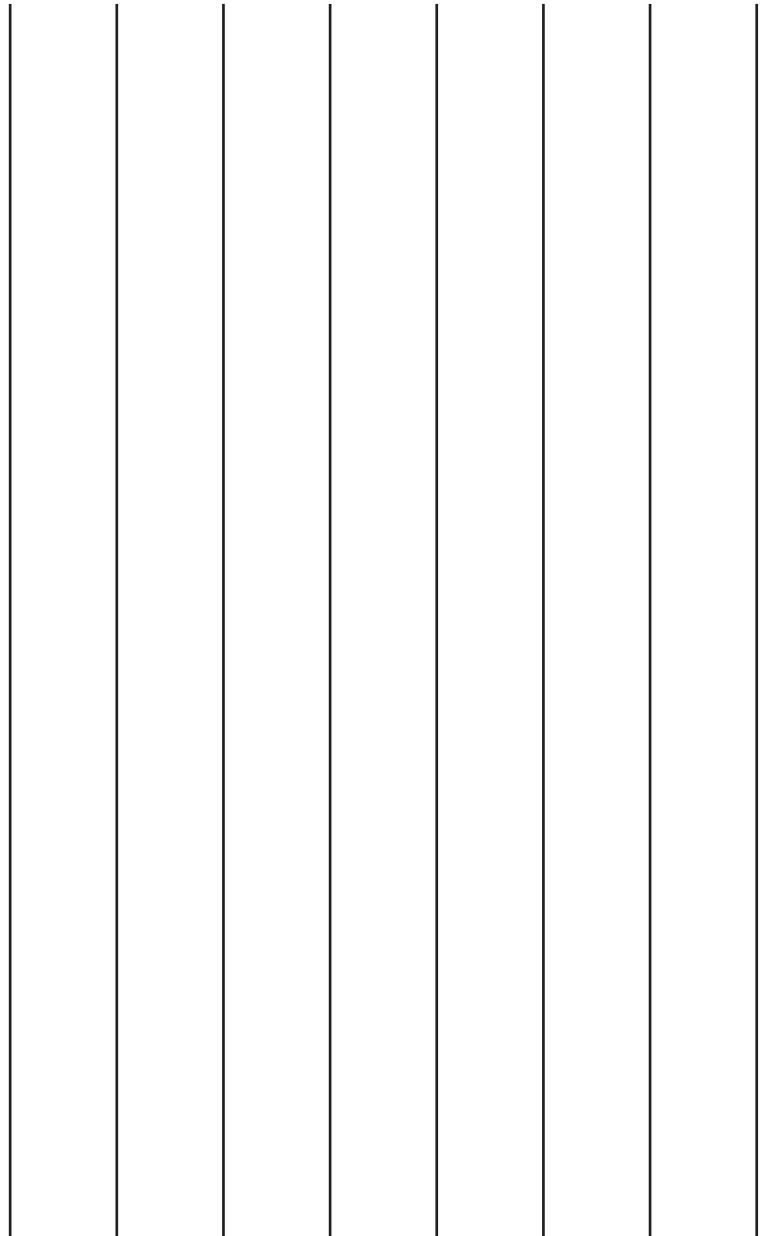

NOTE



GL0603924A24